

PART #

CPU1A



310.318.2491 • 800.523.1269 • www.mockett.com

Assembly Instructions for CPU holder

READ THIS FIRST!

For CPU-1A

These instructions assume you will mount CPU-1a vertically. If you are going to do so horizontally, just turn unit over on its side and follow along. It's all the same.

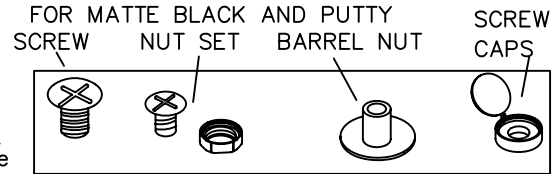

CPU1A

Enclosed kit consists of four equal size L-shaped pieces and 8 screw, barrel nut and nut sets and 8 screw caps Drawing "A"

- STEP 1: Measure dimensions of CPU and write them down
- STEP 2: Assemble short sides of any two pieces, measuring inside dimensions of opening needed to snugly fit CPU. Fasten using screws as shown. Put screw cap in place BEFORE inserting screw. Drawing "B"
- STEP 3: Assemble other two pieces as above.
- STEP 4: Join two sections together with adequate room to snugly fit CPU on all four sides. Use two screw sets and two screw cap sets on each long side. Drawing "C". Measure clearances again before tightening all screws to make sure CPU will fit snugly. Snap all screw caps shut.
- STEP 5: Screw into place through holes in all four corners as shown. Use washers in two corners so CPU Holder will be level on all four sides. Drawing "D"

