


Walter of Wabash

HH-510 Furniture Tipping Restraint Installation Instructions

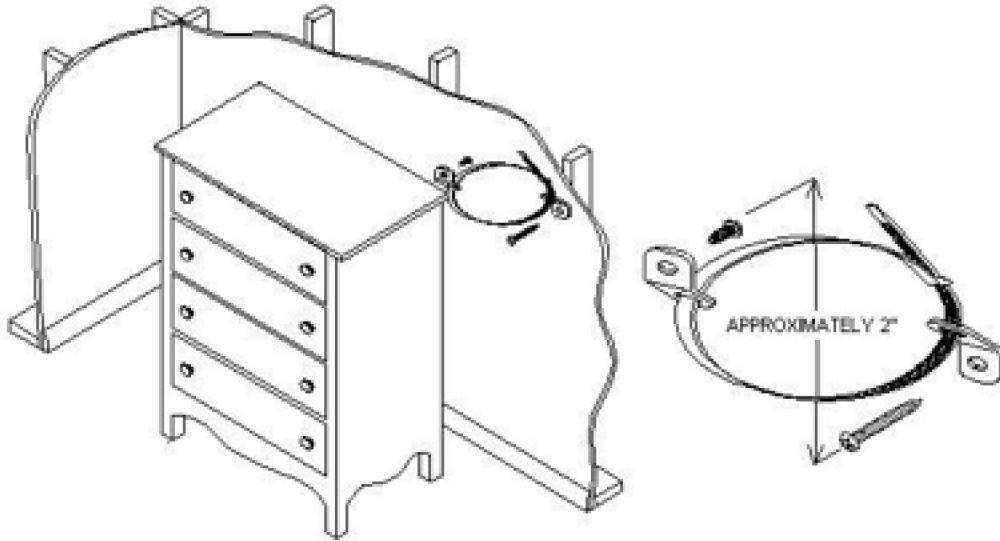

This tip restraint must be attached to a wall stud using the 2" screw enclosed:

1. Attach a bracket to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the brackets.
2. Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the strap is securely laced and locked.

Available from Würth Baer Supply Company
WürthBaerSupply.com